D760

INSTRUCTION MANUAL

Model 182A

4 MHz
Function Generator

WAVETEK®

D 760

10-13-89 T.D.

S/N N 7291 318
GRN TAG 24394
PO 9255-304
515

INSTRUCTION MANUAL

Model 182A

4 MHz
Function Generator

© 1982 Wavetek

This document contains information proprietary to Wavetek and is provided solely for instrument operation and maintenance. The information in this document may not be duplicated in any manner without the prior approval in writing from Wavetek.

WAVETEK®

WAVETEK SAN DIEGO, INC.
9045 Balboa Ave., San Diego, CA 92123
P. O. Box 85265, San Diego, CA 92138
Tel 619/279-2200 TWX 910/335-2007

Manual Revision: 4/89
Manual Part Number: 1300-00-0165

WARRANTY

Wavetek warrants that all products manufactured by Wavetek conform to published Wavetek specifications and are free from defects in materials and workmanship for a period of one (1) year from the date of delivery when used under normal operating conditions and within the service conditions for which they were furnished.

The obligation of Wavetek arising from a Warranty claim shall be limited to repairing, or at its option, replacing without charge, any product which in Wavetek's sole opinion proves to be defective within the scope of the Warranty. In the event Wavetek is not able to modify, repair or replace non-conforming defective parts or components to a condition as warrantied within a reasonable time after receipt thereof, Buyers shall be credited for their value at the original purchase price.

Wavetek must be notified in writing of the defect or nonconformity within the Warranty period and the affected product returned to Wavetek's factory or to an authorized service center within (30) days after discovery of such defect or nonconformity.

For product warranties requiring return to Wavetek, products must be returned to a service facility designated by Wavetek. Buyer shall prepay shipping charges, taxes, duties and insurance for products returned to Wavetek for warranty service. Except for products returned to Buyer from another country, Wavetek shall pay for return of products to Buyer.

Wavetek shall have no responsibility hereunder for any defect or damage caused by improper storage, improper installation, unauthorized modification, misuse, neglect, inadequate maintenance, accident or for any product which has been repaired or altered by anyone other than Wavetek or its authorized representative and not in accordance with instructions furnished by Wavetek.

Exclusion of Other Warranties

The Warranty described above is Buyer's sole and exclusive remedy and no other warranty, whether written or oral, is expressed or implied. Wavetek specifically disclaims the implied warranties of merchantability and fitness for a particular purpose. No statement, representation, agreement, or understanding, oral or written, made by an agent, distributor, representative, or employee of Wavetek, which is not contained in the foregoing Warranty will be binding upon Wavetek, unless made in writing and executed by an authorized Wavetek employee. Under no circumstances shall Wavetek be liable for any direct, indirect, special, incidental, or consequential damages, expenses, losses or delays (including loss of profits) based on contract, tort, or any other legal theory.

CONTENTS

SECTION 1 GENERAL DESCRIPTION

1.1 THE MODEL 182A 1-1
1.2 SPECIFICATIONS 1-1
1.2.1 Versatility 1-1
1.2.2 Frequency Precision 1-1
1.2.3 Amplitude Precision 1-1
1.2.4 Waveform Characteristics 1-2
1.2.5 General 1-2

SECTION 2 INSTALLATION

2.1 MECHANICAL INSTALLATION 2-1
2.2 ELECTRICAL INSTALLATION 2-1
2.2.1 Power Connection 2-1
2.2.2 Signal Connections 2-1
2.3 ELECTRICAL ACCEPTANCE CHECK 2-1
2.4 CHANGING THE OUTPUT IMPEDANCE 2-2

SECTION 3 OPERATION

3.1 CONTROLS AND CONNECTIONS 3-1
3.2 OPERATION 3-2
3.2.1 Signal Termination 3-2
3.2.2 Manual Function Generator Operation 3-2
3.2.3 Voltage Controlled Function Generator Operation 3-2
3.2.4 Waveforms 3-3

SECTION 4 CIRCUIT DESCRIPTION

4.1 FUNCTIONAL BLOCK DIAGRAM ANALYSIS 4-1

SECTION 5 ALIGNMENT

5.1 FACTORY REPAIR 5-1
5.2 REQUIRED TEST EQUIPMENT 5-1
5.3 REMOVING GENERATOR COVERS 5-1
5.4 ALIGNMENT 5-1

SECTION 6 TROUBLESHOOTING

6.1 FACTORY REPAIR 6-1
6.2 TROUBLESHOOTING TABLES 6-1
6.3 TROUBLESHOOTING INDIVIDUAL COMPONENTS 6-1
6.3.1 Transistor 6-1
6.3.2 Diode 6-1
6.3.3 Operational Amplifier 6-1
6.3.4 FET Transistor 6-1
6.3.5 Capacitor 6-1
6.4 GENERAL INSTRUCTIONS 6-2

SECTION 7 PARTS AND SCHEMATICS

7-1 DRAWINGS 7-1
7-2 ERRATA 7-1
7-3 ORDERING PARTS 7-1

SAFETY FIRST

Protect yourself. Follow these precautions:

- Don't touch the outputs of the instrument or any exposed test wiring carrying the output signals. This instrument can generate hazardous voltages and currents.
- Don't bypass the power cord's ground lead with two-wire extension cords or plug adaptors.
- Don't disconnect the green and yellow safety-earth-ground wire that connects the ground lug of the power receptacle to the chassis ground terminal (marked with ⏚ or ⚠).
- Don't hold your eyes extremely close to an rf output for a long time. The normally nonhazardous low-power rf energy generated by the instrument could possibly cause eye injury.
- Don't plug in the power cord until directed to by the installation instructions.
- Don't repair the instrument unless you are a qualified electronics technician and know how to work with hazardous voltages.
- Pay attention to the **WARNING** statements. They point out situations that can cause injury or death.
- Pay attention to the CAUTION statements. They point out situations that can cause equipment damage.

SECTION 1
GENERAL DESCRIPTION

1.1 THE MODEL 182A

Wavetek Model 182A Four MHz Function Generator is a precision source of sine, triangle and square waveforms plus dc voltage. All are front panel variable from 0.004 Hz to 4 MHz and can be externally modulated or swept over a 1000:1 range. Output can be continuous or the generator can be triggered or gated by an external signal or a front panel switch. Amplitude of the waveforms is variable from 10V peak-to-peak into 50Ω down to 30 mV p-p. DC reference of the waveforms can be offset positively or negatively.

The main waveform output is 20V peak-to-peak maximum and can be varied over a 30 dB range. A second waveform at 2V peak-to-peak maximum (20 dB attenuation) and a TTL level square at generator frequency are auxiliary outputs. Inputs are provided for external voltage controlled generator frequency (VCG) and for triggering and gating the generator.

1.2 SPECIFICATIONS

1.2.1 Versatility

Waveforms
Sine ∿ , triangle ∿ , square ⊓ , TTL pulse ⎍ and dc.

Operational Modes
Continuous: Generator runs continuously at selected frequency.

Triggered: Generator is quiescent until triggered by external signal or manual trigger, then generates one complete waveform cycle at selected frequency.

Gated: As triggered mode, except output continues for duration of gate signal. Last waveform started is completed.

Frequency Range
0.004 Hz to 4 MHz in 7 overlapping decade ranges:

×1	0.004 Hz to 4 Hz
×10	0.04 Hz to 40 Hz
×100	0.4 Hz to 400 Hz
×1K	4 Hz to 4 kHz
×10K	40 Hz to 40 kHz
×100K	400 Hz to 400 kHz
×1M	4 kHz to 4 MHz

Function Output
∿ , ∿ , ⊓ selectable and variable to 20V p-p (10V p-p into 50Ω) HI output, and to 2V p-p (1V p-p into 50Ω) LO output. Both outputs varied with a 30 dB vernier. Peak output current is 100 mA maximum (HI output) into 50Ω (200 mA peak into a short circuit). Source impedance is 50Ω.

DC Offset and DC Output
Waveform offset and dc output selectable and variable thru HI and LO BNC outputs. DC output selectable by not selecting a waveform function. HI output is ±10V max (±5V into 50Ω) as offset or Vdc output. Signal-peak plus offset limited to ±10V (±5V into 50Ω). LO output is ±1V max (±0.5V into 50Ω) as is signal-peak plus offset limit. DC offset plus waveform attenuated proportionately at LO (−20 dB) output.

TTL Pulse Output
TTL pulse (50% duty cycle) at generator frequency. Drives up to 20 TTL loads.

VCG — Voltage Controlled Generator
Up to 1000:1 frequency change with external 0 to ±4V signal. Upper and lower frequencies limited to maximum and minimum of selected range.
Slew Rate: 2% of range per μs.
Linearity:
±0.5% thru ×100K range; ±2% on ×1M range.
Input Impedance: 2 kΩ.

Trigger and Gate
Input: TTL compatible levels.
Pulse Width: 50 ns minimum.
Repetition Rate: 4 MHz maximum.

1.2.2 Frequency Precision

Dial Accuracy
±5% of full scale.

Time Symmetry
Square wave variation from 0.2 to 4.0 on dial less than: ±1% to 100 kHz; ±5% to 4 MHz.

1.2.3 Amplitude Precision

Sine variation with frequency less than: ±0.2 dB on all ranges through ×100K; ±1.0 dB to 4 MHz.

1.2.4 Waveform Characteristics

Sine Distortion
Less than:
0.5% on ×1K and ×10K ranges; 1% on ×1, ×10, ×100 and ×100K ranges. All harmonics 25 dB below fundamental on ×1M range.

Triangle Linearity
Greater than 99% to 200 kHz.

Square Wave Rise and Fall Time
At HI output, less than 50 ns for 10V p-p output into 50Ω termination.

1.2.5 General

Environmental
Specifications apply at 25°C ±5°C. Instrument will operate from 0°C to 50°C ambient temperatures.

Dimensions
28.6 cm (11¼ in.) wide; 8.9 cm (3½ in.) high; 26.7 (10½ in.) deep.

Weight
2.7 kg (6 lb) net; 4.5 kg (10 lb) shipping.

Power
90 to 126V or 198 to 252V (specify); 48 to 66 Hz; less than 15 watts.

NOTE

All specifications apply for dial between 0.2 and 4.0; amplitude at 10V p-p from HI output into 50Ω termination.

SECTION 2
INSTALLATION

2.1 MECHANICAL INSTALLATION

After unpacking the instrument, visually inspect all external parts for possible damage to connectors, surface areas, etc. If damage is discovered, file a claim with the carrier who transported the unit. The shipping container and packing material should be saved in case reshipment is required.

2.2 ELECTRICAL INSTALLATION

2.2.1 Power Connection

WARNING

To preclude injury or death due to shock, the third wire earth ground must be continuous to the facility power outlet. Before connecting to the facility power outlet, examine extension cords, autotransformers, etc., between the instrument and the facility power outlet for a continuous earth ground path. The earth ground path can be identified at the plug on the instrument power cord; of the three terminals, the earth ground terminal is the nonmatching shape, usually cylindrical.

CAUTION

To prevent damage to the instrument, check for proper match of line and instrument voltage and proper fuse type and rating.

NOTE

Unless otherwise specified at the time of purchase, this instrument was shipped from the factory for operation on a 90 to 126 Vac line supply and with a 1/4 amp slow blow fuse. Instruments configured for 198 to 252 Vac have a 1/8 amp slow blow fuse. Select the appropriate fuse and 115 or 230 switch position at the rear panel when changing power sources.

2.2.2 Signal Connections

Use 3 foot RG58U 50Ω shielded cables equipped with female BNC connectors to distribute all input and output signals.

2.3 ELECTRICAL ACCEPTANCE CHECK

This checkout procedure is a general verification of generator operation. Should a malfunction be found, refer to the warranty in the front of this manual.

A two channel oscilloscope, four 3 foot 50Ω coax cables with female BNC connectors, a coax tee connector and an additional function generator are required for this procedure.

Preset the generator front panel controls as follows:

Control	Position
Dial	2.0
MODE	CONT (released)
FUNCTION	⌐¬
DC OFFSET	OFF (ccw)
AMPLITUDE	MAX (cw)
FREQUENCY MULTIPLIER	X1K

Set up the oscilloscope, Model 182A and external function generator as shown in figure 2-1 and perform the steps in table 2-1.

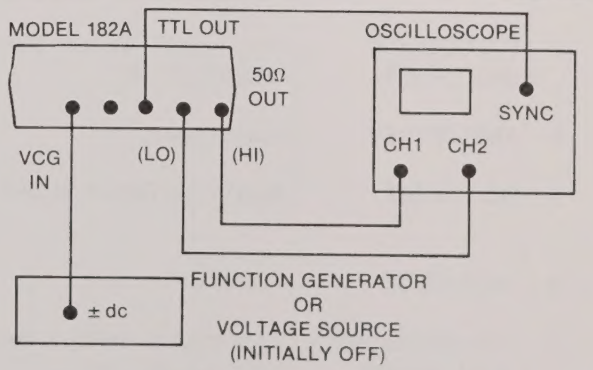

Figure 2-1. First Setup

2.4 CHANGING THE OUTPUT IMPEDANCE

The output impedance is normally:

HI 10V p-p (50Ω source) into 50Ω.
LO 1V p-p (50Ω source) into 50Ω.

Amplitude is normally variable over 30 dB with −50 dB lowest possible amplitude.

If simultaneous 600Ω and 50Ω output impedances are desired:

1. Change value of R148 from 499Ω to 604Ω.
2. Remove R149.

The result is:
HI 10V p-p (50Ω source) into 50Ω.
LO 10V p-p (600Ω source) into 600Ω.

Amplitude is variable over 30 dB with −30 dB lowest possible amplitude. Square wave rise and fall time is less than 150 ns. Any value greater than 600Ω may also be substituted for the value of R148 for other output impedances.

To increase the range of the variable amplitude control in a modified unit beyond 30 dB, decrease the value of R124 as necessary. Waveform quality relative to the standard unit is not guaranteed below −30 dB and above 20 kHz.

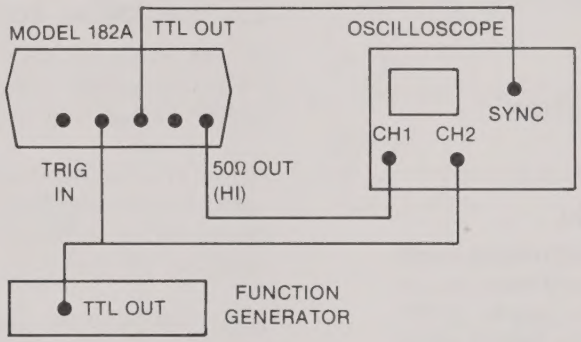

Figure 2-2. Second Setup

Table 2-1. Initial Checkout

Step	Control	Position/Operation	Observation
1	POWER	ON	±10V square wave on CH1 and ±1V on CH2. Return to CH1 only.
2	Dial	Rotate either direction. Return to 2.0.	Rotation ccw increases frequency of ⊓⊔ ; rotation cw decreases frequency.
3	FREQUENCY MULTIPLIER	Press each switch sequentially; return to ×1K.	Frequency increases in decade steps, left to right.
4	AMPLITUDE	Rotate ccw.	Amplitude decreases.
5	DC OFFSET	Rotate cw. Return to OFF.	Output immediately offset negative, then moves positive. OFF return it to original level.
6	AMPLITUDE	Rotate cw.	Square returns to original amplitude.
7	Function Generator or DC Voltage Source	Vary input dc voltage; then disconnect VCG IN input.	Frequency increases with positive voltage and decreases with negative voltage.

Table 2-1. Initial Checkout (Continued)

Step	Control	Position/Operation	Observation
8	FUNCTION	Press ∿, ⊓, ⩘.	Observe ∿, ⊓, ⩘ waveforms.
9	MODE	Gate (CONT depressed, TRIG/GATE released).	A dc level near zero volts (except ⊓ function).
10	MANUAL TRIGGER	Press and hold.	Continuous ⩘.
Set up trigger source as shown in figure 2-2. Set trigger source for 100 Hz TTL signal.			
11	——	———	⩘ gated on during positive portion of TTL signal on CH2.
12	Trigger/Gate	Trigger (depressed)	One ∿ cycle per trigger cycle.

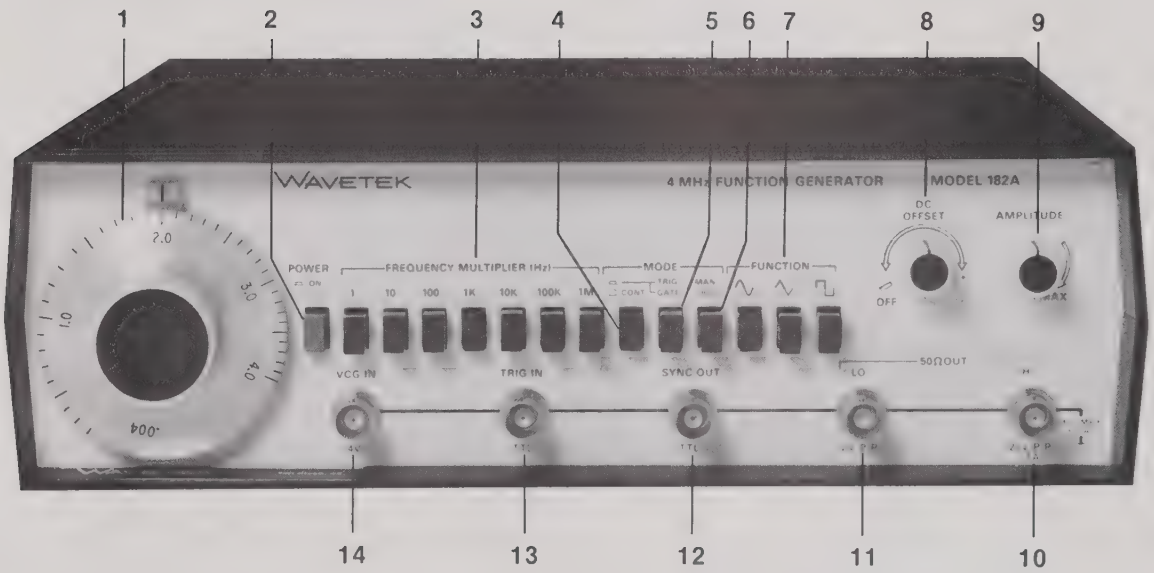

Figure 3-1. Front Panel Controls and Connectors

SECTION 3
OPERATION

3.1 CONTROLS AND CONNECTIONS

The generator front panel controls and connectors are shown in figure 3-1 and keyed to the following descriptions.

1 Frequency Dial — Settings under the dial index mark summed with **14** and multiplied by **3** determine the output signal frequency.

2 POWER Button — Turns generator ON and OFF.

3 FREQUENCY MULTIPLIER Controls — Selects one of seven frequency multipliers for dial **1** setting.

4, 5 Generator MODE Controls — Selects one of the following three modes:

CONT — **4** released. Continuous output at 50Ω OUT **10** and **11** and SYNC OUT (TTL) **12** connectors.

TRIG — **4** and **5** pressed. DC level output until generator triggered by the MAN TRIG **6** or with a signal at the TRIG IN connector **13** . When triggered, the generator output is one cycle of waveform followed by a dc level.

GATE — **4** pressed and **5** released. As for TRIG except the output is continuous for the duration of the manual or external trigger signal. The last cycle started is always completed.

6 Manual Trigger Button — Triggers or gates the output signals when generator mode is TRIG or GATE (**4** pressed). In trigger mode, one waveform cycle is output when the button is pushed. In gate mode, waveform cycles are continuously output as long as the button is held in.

7 FUNCTION Selector — Selects one of three waveforms or when all three buttons are released, a dc level.

8 DC OFFSET Control — Offsets the 50Ω OUT waveforms or gives dc levels from −10V to +10V (−5V to +5V into 50Ω) at **10** and from −1V to +1V (−0.5V to +0.5V into 50Ω) at **11** . An OFF position ensures no offset.

9 AMPLITUDE Control — Ccw rotation reduces waveform amplitudes at **10** and **11** by 30 dB. DC and offset voltages are not affected by this control.

10 50Ω OUT HI Connector — The main output of the generator at the function selected. Maximum 20V p-p (10V p-p into 50Ω) with 30 dB continuous amplitude control. 50Ω source impedance.

11 50Ω OUT LO Connector — Same as **10** except 20 dB (1/10) lower in amplitude.

12 TTL OUT Connector — A TTL square for each cycle of the generator. To be used for synchronization or as a TTL signal capable of driving 20 TTL loads.

13 TRIG IN Connector — Accepts a TTL signal to trigger or gate the generator. Triggers on the rising (low to high) transition and gates during the positive (high) portion of the triggering signal.

14 VCG IN Connector — Accepts ac or dc voltages to proportionately control frequency within the range determined by the FREQUENCY MULTIPLIER **3** . Positive voltage increases the frequency set by the dial **1** ; negative voltage decreases the frequency. The VCG IN will not drive the generator frequency beyond the normal dial limits of a range. Input impedance is 2 kΩ.

3.2 OPERATION

Perform the initial checkout in Section 2 for the feel of the instrument. Any questions concerning individual controls and connectors may be answered in paragraph 3.1.

3.2.1 Signal Termination

Proper signal termination, or loading, of the generator connectors is necessary for its specified operation. For example, the proper termination of either of the 50Ω OUT connectors is shown in figure 3-2. Placing the 50 ohm terminator, or 50 ohm resistance, in parallel with a higher impedance, matches the receiving instrument input impedance to the coax characteristic and generator output impedance, thereby minimizing signal reflection or power loss on the line due to impedance mismatch.

The input and output impedances of the generator connectors are listed below.

Connector	Impedance
50Ω OUT (HI)	50Ω
50Ω OUT (LO)	50Ω
SYNC OUT (TTL)	*
TRIG IN	*
VCG IN	2 kΩ

*The TTL OUT connector is diode protected and can drive up to 20 Transistor-Transistor-Logic (TTL) loads (low level between 0V and 0.4V, and high level between 2.4V and 5V). It should not be conencted to resistive load less than 600Ω. The TRIG IN connector accepts TTL logic levels, is diode protected, and requires 500 μA drive from a high level output.

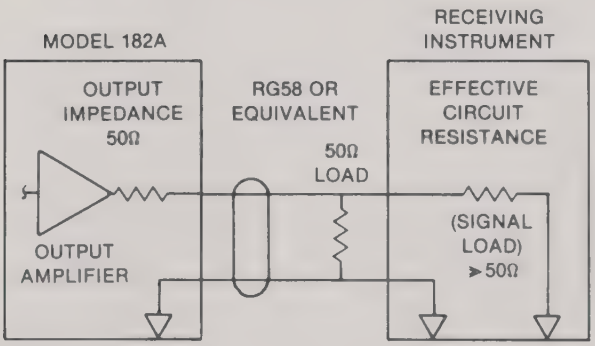

Figure 3-2. Signal Termination

3.2.2 Manual Function Generator Operation

For basic operation, select the waveform frequency and amplitude. The following steps demonstrate manual control of the function generator. (Bold numbers are keys to figure 3-1.)

Step	Control/Connector	Setting
1	50Ω OUT **10** **11**	Connect circuit to either output (refer to paragraph 3.2.1).
2	FREQUENCY MULTIPLIER **3**	Set to desired range of frequency.
3	Frequency Dial **1**	Set to desired frequency within the range.
4	FUNCTION **7**	Set to desired waveform.
5	DC OFFSET **8**	Set as desired. Limit waveform amplitude to prevent clipping (see figure 3-3).
6	AMPLITUDE **9**	Select for desired amplitude.

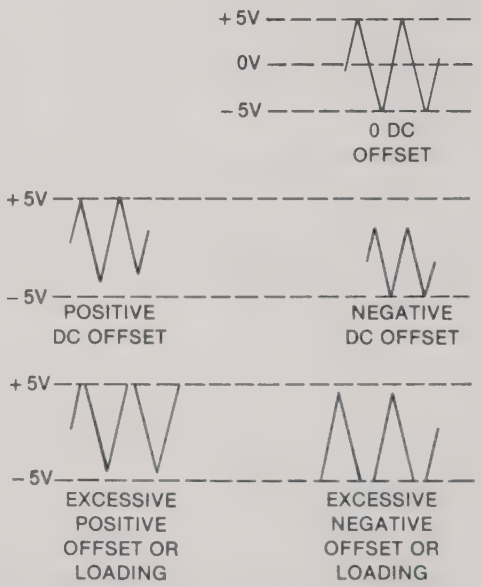

Figure 3-3. DC OFFSET Control

3.2.3 Voltage Controlled Function Generator Operation

Operation as a voltage controlled function generator (VCG) is as for a manually controlled function generator, only the frequency within particular ranges is additionally controlled by an external voltage (±4V excursions) injected at the VCG IN connector. Perform the steps given in paragraph 3.2.2, only set the frequency dial to determine a reference from which the frequency is to be voltage controlled.

1. For frequency control with positive dc inputs at VCG IN, set the dial for a lower frequency limit.

2. For frequency control with negative dc inputs at VCG IN, set the dial for an upper frequency limit.

3. For modulation with an ac input at VCG IN, set the dial at the desired center frequency. Do not exceed the maximum dial range of the selected frequency range.

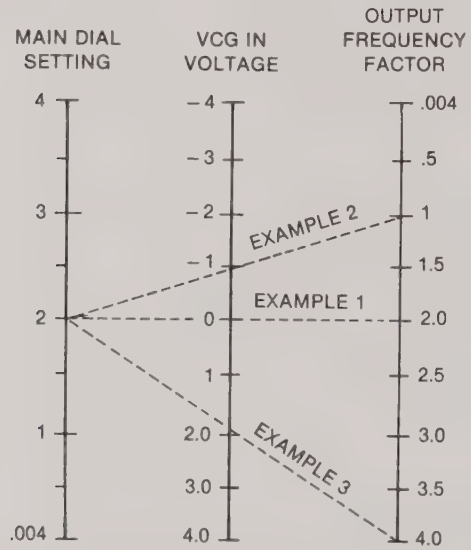

Figure 3-4. VCG Voltage-to-Frequency Nomograph

Figure 3-4 is a nomograph with examples of dial and voltage effects. Example 1 shows that with 0V VCG input, frequency is determined by the main dial setting, 2 in this example. Example 2 shows that with a positive VCG input, output frequency is increased. Example 3 shows that with a negative VCG input, output frequency is decreased. (Note that the Output Frequency Factor column value must be multiplied by a frequency range multiplier to give the actual output frequency.)

NOTE

Nonlinear operation may result when the VCG input voltage is excessive; that is, when the attempted generator frequency exceeds the range limits. The upper limit is four times the multiplier setting, and the lower limit is 1/1000th of the upper limit.

The up to 1000:1 VCG sweep of the generator frequencies available in each range results from a 4V excursion at the VCG IN connector. With the frequency dial set to 4.0, excursions between −4V and 0V at VCG IN provide the up to 1000:1 frequency sweep. With the dial set to .004, excursions between 0V and +4V at VCG IN provide the up to 1000:1 sweep within the set frequency range.

3.2.4 Waveforms

See figure 3-5 for definition of controllable waveform characteristics.

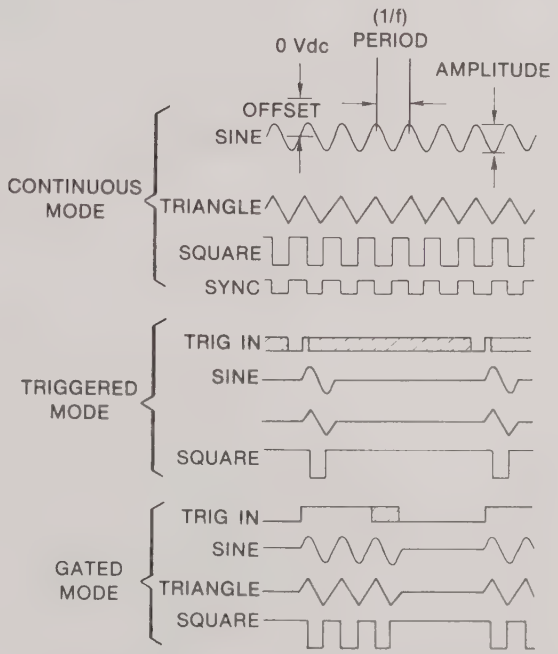

Figure 3-5. Waveform Characteristics

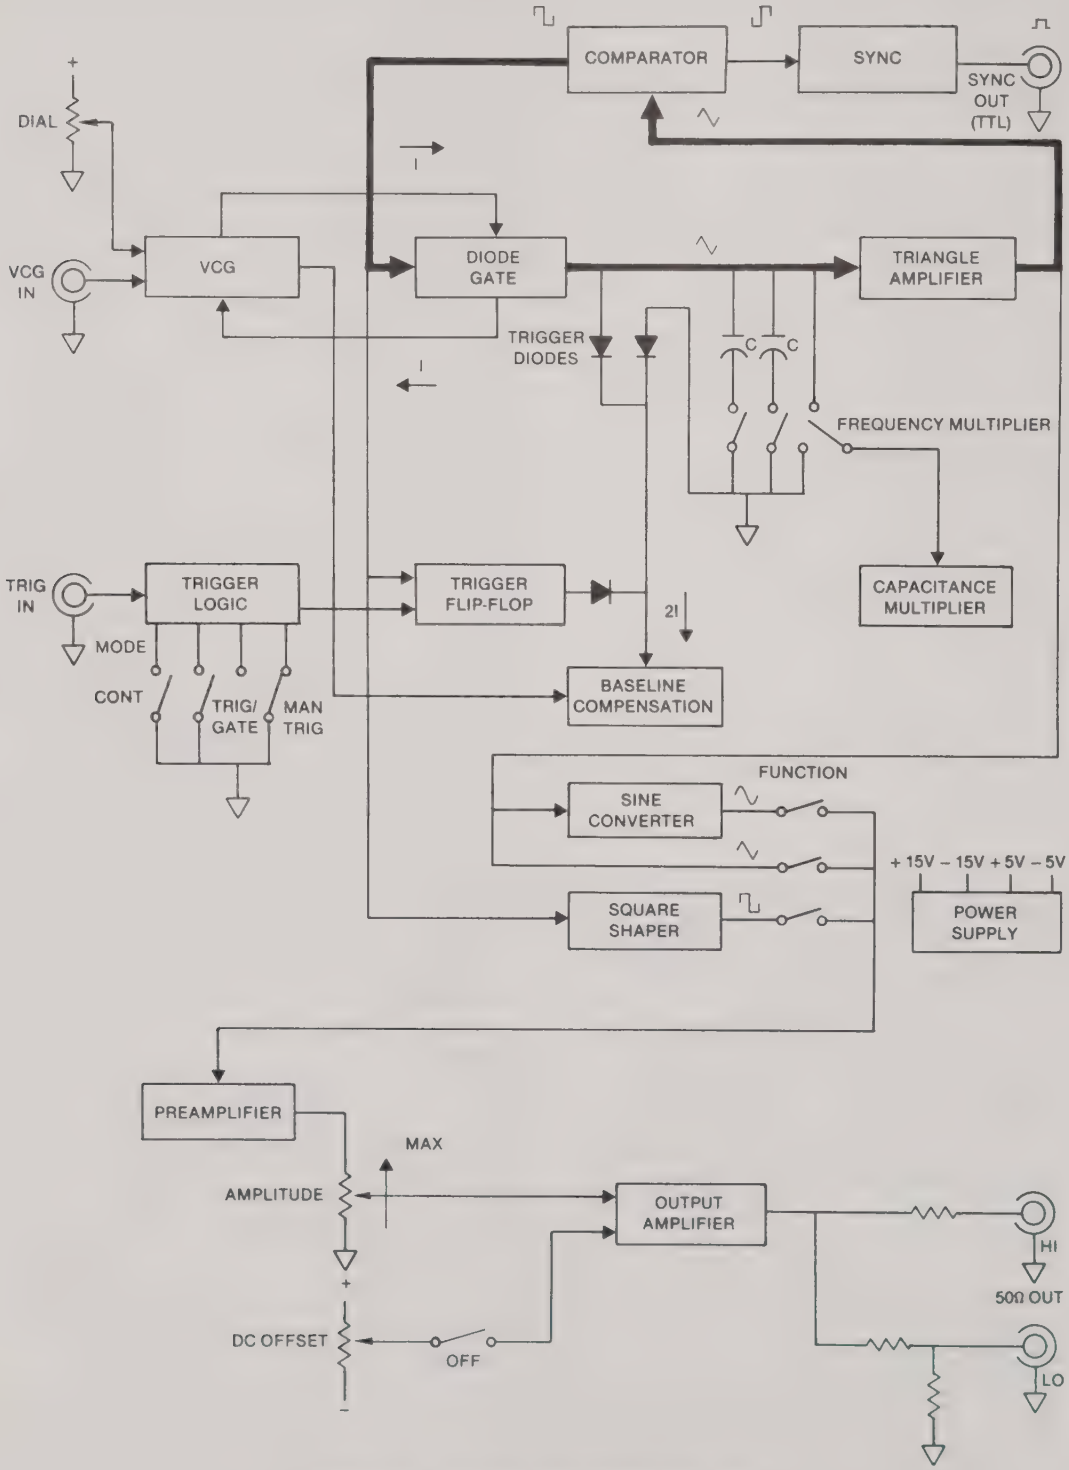

Figure 4-1. Functional Block Diagram

SECTION 4
CIRCUIT DESCRIPTION

4.1 FUNCTIONAL BLOCK DIAGRAM ANALYSIS

This section describes the functions of major circuit elements and their relationships to one another as shown in figure 4-1, functional block diagram. The following sections in this manual provide more detailed information for maintaining the instrument.

As shown in figure 4-1, the VCG sums voltage inputs from the frequency dial and the VCG IN connector. This sum voltage controls the magnitude of a complementary current source and current sink. This current varies linearily from approximately 2 mA to 2 μA and over the 1000:1 (4.0 to .004) range of each frequency multiplier. The VCG also controls the trigger baseline compensation circuit, which consists of another current sink at twice the current magnitude.

The diode gate, controlled by the comparator output, connects either the current source or the current sink to the timing capacitor selected by the frequency multiplier. When the current source is switched in, the charge on the timing capacitor will rise linearily, producing the positive-going triangle slope. Likewise, the current sink produces the negative-going triangle slope.

The triangle amplifier is a unity gain amplifier whose output is fed to the comparator and to the output circuits. The comparator operates as a window detector with limit points set to the triangle peaks. The ± 2V output is sent back to the diode gate and to the output circuits. When the output is $+2$V, the triangle is positive-going until the $+1.25$V limit is reached and the comparator output switches to -2V. When the output is -2V, the triangle is negative-going until the -1.25V limit is reached and the comparator output switches back to $+2$V, repeating the process. In this manner, the basic function generator loop, the bold path in figure 4-1, produces simultaneous generation of triangle and square waves at the same frequency.

The output frequency is determined by the magnitude of the timing capacitor selected by the frequency multiplier switches and by the magnitude of the currents supplied to and removed from it. Since the currents are linearily proportional to the sum of the VCG inputs, so will be the output frequency.

To extend the lower frequency capability of the generator, a capacitance multiplier circuit divides VCG currents by 10 (effectively multiplying the timing capacitor by 10) for each of the lower 3 multiplier ranges.

The TTL square from one side of the comparator is buffered and sent to the SYNC OUT TTL connector. The other side is sent to the trigger flip-flop and to a level shifter to produce the ± 2V bipolar square for the diode gate and the square shaper circuits. The square shaper converts the square into a current signal and applies it to the ⊓⊔ FUNCTION switch. The buffered triangle is applied to the ∧∨ FUNCTION switch and to the sine converter input. The sine converter, using the nonlinear characteristics of its diodes, converts the triangle into a sinusoidal current for the ∿ FUNCTION switch.

The selected function is sent to the preamplifier, where it is inverted and buffered. The preamplifier output goes to the output amplifier through the AMPLITUDE control where it is summed with offset voltage from the DC OFFSET control. Here, waveform and offset are inverted and amplified to a 10V peak signal which can drive a 50Ω termination from a 50Ω source impedance. The output amplifier drives the 50Ω OUT HI connector and a resistor divider producing the 50Ω OUT LO output.

Noncontinuous modes of operation (trigger and gate) result from allowing or preventing the VCG current source from charging the timing capacitor. Whenever the trigger flip-flop output is low, each of the two trigger diodes conduct a current I, sourcing 2I to the baseline compensation circuit. This removes the current I from the VCG current source and forces a 0V baseline at the triangle amplifier input.

When the CONT switch is released, trigger logic is inhibited from passing any trigger signals and the trig-

ger flip-flop output is held high. This prevents the trigger diodes from conducting and the generator loop operates continuously.

When the CONT switch is pressed, the generator loop is held at the 0V baseline. Pressing the TRIG/GATE TRIG/GATE switch puts the instrument in triggered mode and any external or manual trigger signals at the trigger logic input will be transformed into a narrow pulse corresponding to the low-to-high transition of the trigger input. This pulse sets the trigger flip-flop high and allows the generator loop to run. When the triangle negative peak is reached, the comparator low-to-high transition clocks the trigger flip-flop low and, when the 0V baseline level is reached, the generator loop again stops. The result is a single waveform generated after the triggering signal corresponding to 0 to 360° of phase. Successive triggered waveforms always start at the same 0° point.

Releasing the TRIG/GATE switch puts the instrument in the gated mode. This is identical to the triggered mode, except the trigger flip-flop is held high for the full duration of the triggering signal. The generator produces continuous waveforms during the time the external signal is high or the manual trigger switch is held in. The last triggered cycle started is always completed and successive gated bursts always start at the 0° point.

SECTION 5
ALIGNMENT

5.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for alignment or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

5.2 REQUIRED TEST EQUIPMENT

VoltmeterMicrovolt dc measurement (1% accuracy)
Oscilloscope . . . . . ≥60 MHz bandwidth
Counter . . . . . 4 MHz (0.1% accuracy)
50Ω Feedthru . . . . . ±1% accuracy, 2W
Distortion Analyzer . . . . . To 400 kHz
RG58U Coax Cable . . . 3 ft length BNC male contacts

5.3 REMOVING GENERATOR COVERS

1. Invert the instrument and remove the four screws in the bottom cover.
2. Turn the instrument upright; remove the top cover for access to generator alignment controls.
3. When alignment is complete, secure the bottom cover with four screws.

NOTE

Remove the cover only when it is necessary to make adjustments or measurements.

5.4 ALIGNMENT

After referring to the following preliminary data, perform alignment, as necessary, per table 5-1. If performing partial alignment, check previous settings and adjustments for applicability. See figure 5-1 for alignment control location.

NOTE

The completion of the calibration procedure returns the instrument to correct alignment.

CALIBRATION LIMITS AND TOLERANCES ARE NOT INSTRUMENT SPECIFICATIONS

Instrument specifications are given in Section 1 of this manual.

1. All measurements made at the FUNCTION OUT connector must be terminated into a 50Ω (±1%) load.
2. Start the alignment by connecting the unit to an appropriate ac power source and setting the front panel switches as follows:

POWER . . . . . ON
Frequency Dial 4.0
FREQ MULT (Hz) . . . . . ×1K
MODE . . . . . CONT
FUNCTION
DC OFFSET . . . . . OFF
AMPLITUDE . . . . . MAX

3. Allow the unit to warm up at least 30 minutes for final alignment. Keep the instrument cover on to maintain heat. Remove cover only to make adjustments or measurements.

Table 5-1. Alignment Procedure

Step	Check	Tester	Test Point	Control Setting	Adjust	Result	Remark
1	Power Supply	Voltmeter	C4 +	Paragraph 5.4, Step 2		+ 15 ± .75V	Verify. ± 15V should track within 30 mV
2			C5 –			– 15 ± .75V	
3			C7 +			+ 5 ± .25V	
4			C6 –			– 5 ± .25V	
5	Capacitor Multiplier Zero		SW3 - B Wiper		R90	0 ± 2 mV	

Table 5-1. Alignment Procedure (Continued)

Step	Check	Tester	Test Point	Control Setting	Adjust	Result	Remark
6	Approximate Bottom of the Dial Frequency	Counter	50Ω OUT HI (terminate into 50Ω	Dial: .004 FREQ MULT: 10K	R37	20 ms period	
7	Bottom of the Dial Symmetry	Scope			R49	Equalize (+) and (−) half cycles	Set scope to (−) trigger; display one full cycle. Align positive transition to center of screen. Multiply the horizontal display ×10. Set scope (+) trigger; adjust R49 to align negative transition with center of screen
8	Bottom of the Dial Frequency	Counter		FREQ MULT: ×1K	R37	350 ±50 ms period	
9	Top of the Dial Symmetry	Scope		Dial: 4.0	R45	Equalize (+) and (−) half cycles	See step 7
10	Top of the Dial Frequency	Counter		Dial: 4.0 FREQ MULT: ×1K	R19	4 ±0.2 kHz	
11				FREQ MULT: ×10K		40 ±.8 kHz	Verify
12				FREQ MULT: ×1M	C34	4 ±.02 MHz	
13				FREQ MULT: ×100K		400 ±8 kHz	Verify. If necessary, trim by changing value of C33
14				FREQ MULT: ×100	R86	2.5 ±.05 ms	
15				FREQ MULT: ×10		25 ±.5 ms	Verify
16				FREQ: ×1		250 ±5 ms	
17	Sine Distortion	Distortion Analyzer		FUNCTION: ∿ FREQ MULT: ×1K	R97 R114	Adjust for minimum distortion	It may be necessary to reduce amplitude to 5V peak
18	Output Amplitude	Scope		FUNCTION: ∿	R118	10 Vp-p +.3V −0V	
19	Output Offset	Voltmeter		FUNCTION: ∿	R112	0V ±50 mv	
20	Baseline Zero	Scope		MODE: Trigger	R81	0V ±75 mv	It may be necessary to trim the baseline with R80

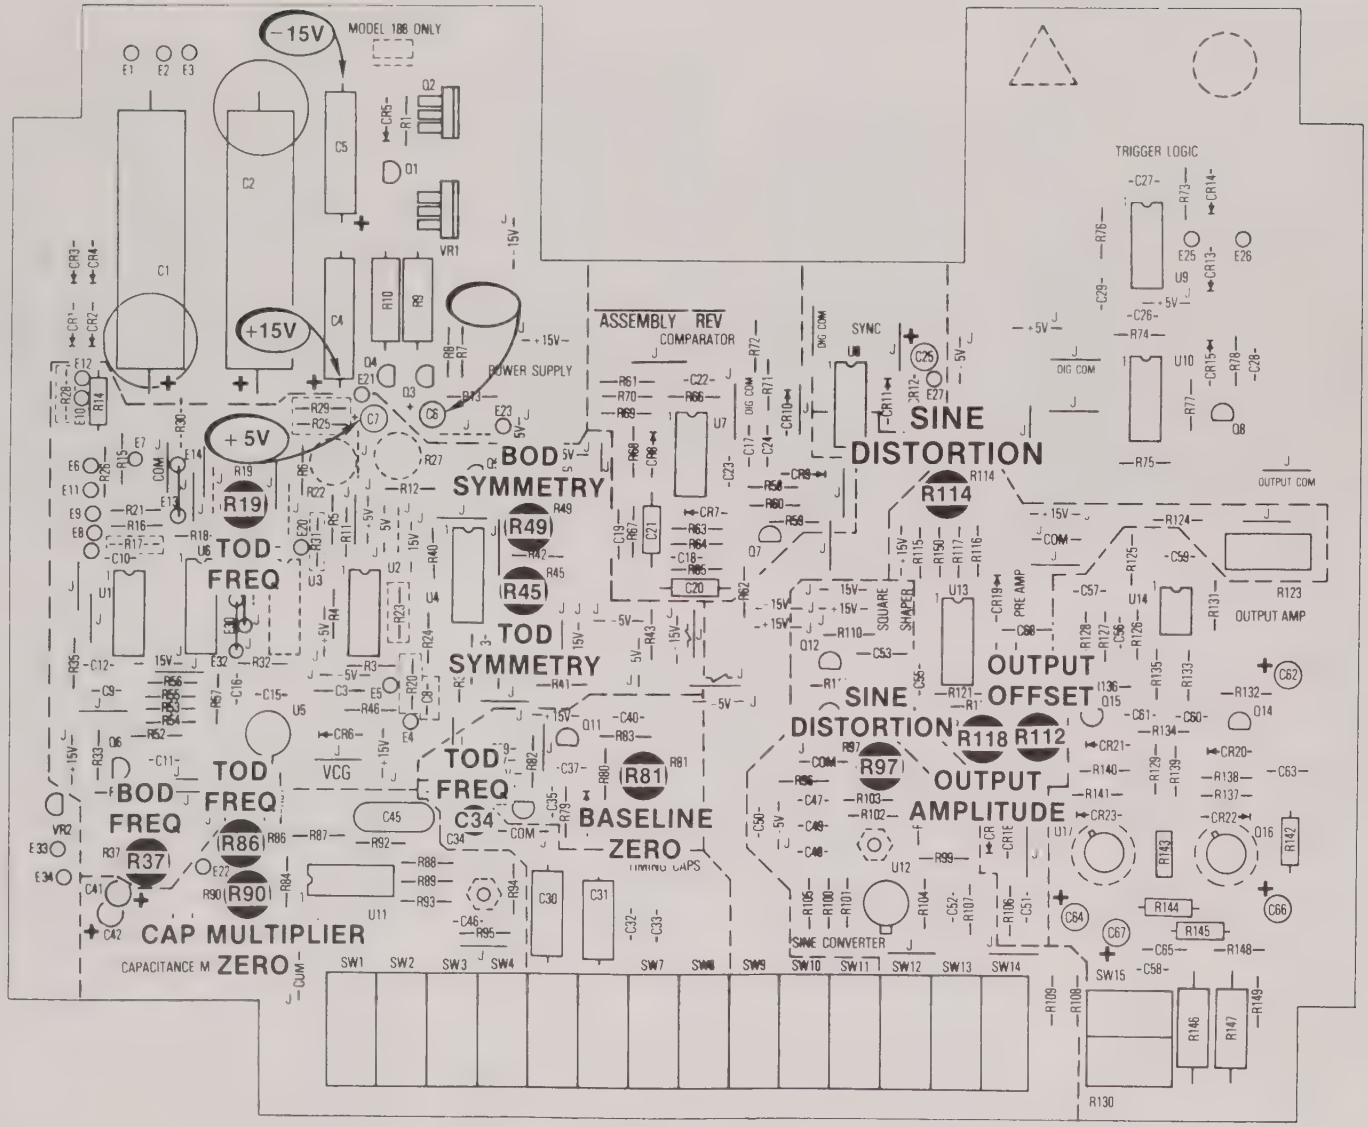

Figure 5-1. Alignment Locations

SECTION 6
TROUBLESHOOTING

6.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for alignment or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

6.2 TROUBLESHOOTING TABLES

Table 6-1 gives an index of the troubleshooting tables by indications of common problems. The tables do not cover every possible trouble, but, when used in conjunction with circuit descriptions and schematics, will be an aid in systematically isolating faulty components.

6.3 TROUBLESHOOTING INDIVIDUAL COMPONENTS

6.3.1 Transistor

1. A transistor is defective if more than one volt is measured across its base-emitter junction in the forward direction.

2. A transistor when used as a switch may have a few volts reverse bias voltage across base-emitter junction.

3. If the collector and emitter voltages are the same, but the base emitter voltage is less than 500 mV forward voltage (or reversed bias), the transistor is defective.

4. A transistor is defective if its base current is larger than 10% of its emitter current (calculate currents from voltage across the base and emitter series resistors).

5. In a transistor differential pair (common emitter stages), either their base voltages are the same in normal operating condition, or the one with less forward voltage across its base emitter junction should be off (no collector current); otherwise, one of the transistors is defective.

6.3.2 Diode

A diode (except a zener) is defective if there is greater than one volt (typically 0.7 volt) forward voltage across it.

6.3.3 Operational Amplifier

1. The "+" and "−" inputs of an operational amplifier will have less than 15 mV voltage difference when operating under normal conditions.

2. When the output of the amplifier is connected to the "−" input (voltage follower connection), the output should be the same voltage as the "+" input voltage; otherwise, the operational amplifier is defective.

3. If the output voltage stays at maximum positive, the "+" input voltage should be more positive than the "−" input voltage, or vice versa; otherwise, the operational amplifier is defective.

6.3.4 FET Transistor

1. No gate current should be drawn by the gate of an FET transistor. If so, the transistor is defective.

2. The gate-to-source voltage is always reverse biased under a normal operating condition; e.g., the source voltage is more positive than the gate voltage for 2N5485, and the source voltage is more negative than gate voltage for a 2N5462. Otherwise, the FET is defective.

3. If the device supplying gate voltage to an FET saturates, the FET has too large a Vgs (pinch off) for the circuit and should be replaced.

6.3.5 Capacitor

1. Shorted capacitors have zero volts across their terminals.

2. Opened capacitor can be located (but not always) by using a good capacitor connected in parallel with the capacitor under test and observing the resulting effect.

6.4 GENERAL INSTRUCTIONS

When encountering a problem, it is advisable to return as many of the front panel controls as possible to their initial settings and still retain the problem. The troubleshooting tables in this section generally begin at these initial settings and specify all subsequent setups. Preset the front panel controls as follows.

Control	Position
Frequency Dial	4.0
POWER	ON
FREQ MULT (Hz)	1K
FUNCTION	⊓⊔
DC OFFSET	OFF
AMPLITUDE	MAX

CAUTION

To prevent damage to components, turn unit off while removing or replacing components, connectors or pc boards.

The suspected malfunctioning condition should be double checked to eliminate the possibility of improper settings or connections. Before attempting fault isolation, the unit should be checked for proper line voltage selection (refer to Section 2). A good visual inspection of the boards and chassis wires for damage or overheating often saves much time.

Once the malfunction is defined, begin the isolation procedure by selecting an indication in table 6-1 which best describes the malfunction and proceed to the referenced troubleshooting table.

Follow through the checks in the troubleshooting table, using schematics and assemblies as a guide. When positive results are not obtained, perform the indicated corrective procedure.

Table 6-1. Fault Isolation

Indication	Table
1. Fuse blown, no power indication or no outputs.	6-2
2. Function outputs missing or clipped when TTL sync OK. Triangle problem.	6-3
3. Sine waveform problem.	6-4
4. Square waveform problem.	6-5
5. TTL sync output problem.	6-6
6. Generator frequency does not respond correctly to dial and VCG input.	6-7
7. Waveform symmetry problem.	6-8
8. Problem on bottom three ranges only.	6-9
9. Generator trigger and gate mode problem.	6-10

Table 6-2. Power Supplies and Generator Loop

Indication: Fuse blown, no power indication or no outputs.

Check	If Faulty, Check
1. Set all controls in their initial positions (refer to paragraph 6.4).	
2. Ensure line voltage matches instrument configuration (refer to Section 2). Check fuse.	Replace fuse; check for normal operation
3. Check C1 (+) and C2 (−) for ±20 to 26V unregulated dc.	a. CR1 - CR4. b. C1, C2. c. SW1. d. T1, RV1, F1 (bracket assembly).
4. Check indicator lamp.	DS1 and VR2, wiring E34 and E33.

Table 6-2. Power Supplies and Generator Loop (Continued)

Indication: Fuse blown, no power indication or no outputs.

Check	If Faulty, Check
5. Check C4 (+) for +15 Vdc.	a. VR1. b. Excessive loading; use board jumpers to isolate cause.
6. Check C5 (−) for −15 Vdc.	a. Q2. b. U2, Q1. c. Excessive loading; use board jumpers to isolate cause.
7. Check U7 pin 14 for +5 Vdc and U7 pin 13 for −5 Vdc.	a. Q4, Q3, U2. b. Excessive loading; use board jumpers to isolate cause.
8. Check U4 pin 13 for a dc shift from approximately +10V to +15V as the frequency dial is rotated from 4.0 to .004. Check U6 pin 8 or a dc shift from −10V to −15V as the frequency dial is rotated from 4.0 to .004.	Go to table 6-7.
9. Check anode CR6 for approximately +3.5 Vdc.	Go to table 6-10.
10. If emitter Q11 has a 4 kHz, ±1.25V triangle, go to table 6-3.	
11. Check for the same voltage at the gate of Q9 as at the emitter of Q11, within saturation limits of the amplifier.	Q9 - Q11 and associated circuitry.
12. If the voltage at the emitter of Q11 is ≥ +1.25V, check cathode CR10 for approximately −2.5V. If the voltage at the emitter of Q11 is ≤ −1.25V, check cathode CR10 for approximately +2.5V.	U7, Q7 and associated circuitry.
13. Check U5.	

Table 6-3. Output Circuits

Indication: Function outputs missing or clipped when TTL sync output OK. Problem with triangle waveform.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check emitter Q11 for a 4 kHz, ±1.25V triangle.	Go to table 6-2.
3. Select triangle function, rotate AMPLITUDE ccw, and check U13 pin 10 for a ±1.25V triangle.	a. R114, R112 adjustments. b. U13. c. SW13.

Table 6-3. Output Circuits (Continued)

Indication: Function outputs missing or clipped when TTL sync output OK. Problem with triangle waveform.

Check	If Faulty, Check
4. Rotate AMPLITUDE cw (MAX), DC OFFSET to OFF, and check 50Ω OUT (HI) for a 20V p-p (open circuit) triangle.	a. Output amplifier circuit. b. E15, E16 wiring.
5. Check for excessive discontinuities at the triangle peaks near the bottom of a frequency range (other than ×1 to ×100).	a. U5. b. SQR signal at cathode CR10 not ±2.5V.
6. Check for nonlinearities in the triangle slopes near the bottom of a frequency range (other than ×1 to ×100).	a. Associated timing capacitor or C36. b. U5, CR6. c. Q9, Q10.
7. Check for a waveform symmetry problem.	Go to table 6-8.

Table 6-4. Sine Conversion

Indication: Sine waveform problem.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check emitter Q1 for a 4 kHz, ±1.25V triangle.	Go to table 6-2.
3. Verify that the ±1.25V triangle peaks at the emitter of Q1 agree within 3%.	a. R62, R63, R64, R65, R67, R68, R69 R70 b. CR7, CR8, U7. c. ±15V supplies.
4. Select triangle function; check for ±1.25V triangle at U13 pin 10.	Go to table 6-3, step 3.
5. Select sine function; check for ±1.25V sine at U13 pin 10.	a. U12 circuitry. b. SW12.
6. Check sine distortion 50Ω OUT (HI) per calibration procedure (refer to table 5.1).	a. R97, R114 adjustments. b. Waveform symmetry, R45 adjustment and table 6-8. c. U12 circuitry.
7 Check sine amplitude vs frequency per specifications (refer to section 1).	C47, C55, C56, C57

Table 6-5. Square Function

Indication: Square waveform problem.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check CR10 cathode for a 4 kHz, approximately ±2V square wave.	Go to table 6-2.
3. Select a triangle function; check U13 pin 10 for a ±1.25V triangle.	Go to table 6-3.
4. Select square function; check U13 pin 10 for a ±1.25V square.	a. Q12, Q13 circuitry. b. SW14.
5. Check square wave at 50Ω OUT (HI) for the same 20V p-p (open circuit) amplitude as the triangle and sine.	R106, R110, R111.
6. Check rise/fall times of 4 MHz square (50Ω terminated) for <50 ns.	C51, C55, C56, C57.

Table 6-6. TTL Sync Output

Indication: TTL sync output problem.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check U8 pin 1 for a TTL level, 4 kHz square.	Go to table 6-2.
3. Check U8 pin 8 for a TTL level, 4 kHz square.	a. U8. b. CR11, CR12.
4. Check SYNC OUT TTL.	E27, E28, E19 wiring.
5. Check SYNC OUT waveform at 4 MHz, using a TTL load termination or a ≥600Ω resistive termination and ≤3 foot RG58U coax.	a. U8. b. E19 ground connection.

Table 6-7. VCG Circuit

Indication: Generator does not respond correctly to dial and VCG input.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check for approximately +15V at E11.	a. E10, E11 and E12 wiring. b. +15V supply. c. Dial potentiometer.
3. Check for 0 ±10 mV at U1 pin 13.	U1.

Table 6-7. VCG Circuit (Continued)

Indication: Generator does not respond correctly to dial and VCG input.

Check	If Faulty, Check
4. Check U1 pin 14 for approximately −5V.	U1.
5. Check that as the dial is rotated from 4.0 to .004, the voltage at U1 pin 14 varies from approximately −5 to 0V.	U1.
6. Ensure that U1 pin 5 remains at a constant 0V ±40 mV as the dial is varied.	U1, U4, and U6 circuits.
7. Check that, as the dial is rotated from .004 to 4.0, the voltage at U1 pin 1 does not saturate near −15V or +15V (typical range is between −10V and +10V) and stops varing with the dial.	Q6, U1, and U6 circuits.
8. Check that as the dial is rotated from .004 to 4.0, U6 pin 8 varies from approximately −15V to −10V.	U6, U1, and Q6 circuits.
9 Check that, as the dial is rotated from .004 to 4.0, the voltage at U1 pin 7 does not saturate near +15V or −15V (typical range is between +10V and −10V) and stops varying with the dial.	U4 and U1 circuits.
10 Check that, as the dial is rotated from .004 to 4.0, U4 pin 13 varies from approximately +15V to +10V.	U4 and U1 circuits.
11 Check for nonlinearity in the ±1.25V triangle at the emitter of Q11 near the bottom of the ×1K through ×1M ranges.	a. Associated timing capacitors or C36. b. U5, CR6. c. Q9, Q10.
12. Check frequencies of ×1K, ×10K and 100K ranges.	a. Adjust R19. b. C30, 31 and 32 (trimmed by C33).
13. Check frequency and linearity of ×1M range.	a. C34. b. C36. c. C18, 19, 20 and 21.
14. Check frequencies of ×1, ×10 and ×100 ranges.	R86 and table 6-9.

Table 6-8. Symmetry

Indication: Waveform symmetry problem.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. If symmetry problem appears on ×1, ×10, ×100 ranges only, problem may be R90 adjustment or go to table 6-9.	
3. Perform steps 5 through 12 of table 6-7, then return to this table.	a. R49 adjustment. b. R44, adjustment.
4. Verify RUN signal at cathode CR6 is approximately +3.5V.	Go to table 6-10.
5. Verify U6 pin 4 and U6 pin 15 vary from approximately −10V to −15V as dial is rotated from 4.0 to .004.	U1, U6, R52, R53.
6. Verify amplitude of SQR signal at cathode CR10 is approximately ±2V.	a. Q7 circuit. b. U7 circuit. c. +5V supply.
7. Check U5, CR6.	

Table 6-9. Capacitance Multiplier

Indication: Problem on bottom frequency ranges only.

Check	If Faulty, Check
1 Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation on ×1K range.
2. Check for 0 Vdc at U11 pins 2 and 6.	SW2 - SW4.
3. Check for approximately 0 Vdc at U11 pin 12.	U11 circuitry.
4. Check for 0 Vdc ±5 mV at U11 pin 10.	a. R90 adjustment. b. U11 circuitry.
5. Select ×100 range; check U11 pin 10 for heavy oscillations.	C46, U11.
6. Check that the signal at U11 pin 2 is amplified by approximately 6 at pin 12 (within saturation limits).	U11 circuitry.
7. Check for the same signal at U11 pins 6 and 7 as at the emitter of Q11.	SW4, U11 circuitry.
8. Ensure that R93 and R94 are shorted in the ×100 range.	SW4.

Table 6-9. Capacitance Multiplier (Continued)

Indication: Problem on bottom frequency ranges only.

Check	If Faulty, Check
9. Check 400 Hz frequency (4.0 × 100).	a. R86 adjustment. b. R89, R95, C45.
10. Check 40 Hz frequency (4.0 × 10).	R93, SW3.
11. Check 4 Hz frequency (4.0 × 1).	R94.
12. Check symmetry at 0.2 × 100; ensure triangle is linear.	a. R90 adjustment. b. U11. c. Leaky C30, C36, C45, C46, CR6, U5, Q9.

Table 6-10. Trigger Logic

Indication: Generator trigger and gate mode problems.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal continuous operation.
2. If generator operates normally in continuous mode, go to step 7.	
3. Check for 0V at U9 pins 2 and 5.	SW9.
4. Check for a TTL low at U10 pin 10.	U9, +5V supply.
5. Check for +5V at U10 pin 9.	a. U10. b. CR6, CR15, Q8. c. U6.
6. Check for approximately +3.5V at anode CR6. Check for normal continuous mode operation.	a. CR6, U6, Q8. b. Go to table 6-2.
7. Check that U6 pin 4 and U6 pin 15 vary from approximately −10V to −15V as dial is rotated from 4.0 to .004.	a. U6, R52, R53. b. Go to table 6-7.
8. Go to gated mode (CONT depressed, TRIG/GATE released). Check U9 pin 2 for a TTL high.	a. U10. b. SW9, SW11, +5V supply.
9. Check U9 pin 1 for a TTL high.	a. U9. b. R73, −5V supply.
10. Check U10 pin 10 for a TTL high.	a. U9. b. U10.

Table 6-10. Trigger Logic (Continued)

Indication: Generator trigger and gate mode problems.

Check	If Faulty, Check
11. Check U10 pin 9 for TTL low.	a. U10. b. Q8.
12. Check anode CR6 for approximately −1.5V.	a. CR15, Q8, R78. b. CR6.
13. Check cathode CR6 for approximately −0.7V.	a. U5. b. U6.
14. Check emitter Q11 for 0 Vdc ±100 mV.	a. R81 adjustment. b. Q9 - Q11 circuitry.
15. Connect an external TTL signal to TRIG IN connector; check for the inverse of that signal at U10 pin 10.	a. E25, E26. b. CR13, CR14. c. U9, SW10.
16. Press TRIG/GATE switch and check for an approximate 20 ns negative pulse at U10 pin 10 following the low-to-high transition of the external signal (increasing the frequency of the external generator makes this pulse more visible).	a. U9, SW10. b. C29.
17. Remove the external signal and verify that U10 pin 5 goes from high to low when the MAN TRIG switch is held depressed.	a. SW11. b. U10.
18. Release the TRIG/GATE switch (gated) and check that U10 pin 10 goes from high to low when the MAN TRIG switch is pressed.	SW9.
19. Monitor 50Ω OUT, triangle function, for 0 Vdc baseline.	R81, R112 adjustments.
20. Press MAN TRIG switch and check 50Ω OUT for a continuous triangle while the switch is held. Depress TRIG/GATE switch (triggered) and verify	a. U10 or clock signal to U10 from U7 b. C29 (pulse too narrow)

SECTION 7
PARTS AND SCHEMATICS

7.1 DRAWINGS

The following assembly drawings parts lists and schematics are in the arrangement shown below.

7.2 ERRATA

Under Wavetek's product improvement program, the latest electronic designs and circuits are incorporated into each Wavetek instrument as quickly as development and testing permit. Because of the time needed to compose and print instruction manuals, it is not always possible to include the most recent changes in the initial printing. Whenever this occurs, errata pages are prepared to summarize the changes made and are inserted inside the shipping carton with this manual. If not such pages exist, the manual is correct as printed.

7.3 ORDERING PARTS

When ordering spare parts, please specify part number, circuit reference, board, serial number of unit and, if applicable, the function performed.

NOTE

The number etched into a PC board is the bare board part number. The assembly (board and components on the board) part numberis stamped on the board. The assembly drawing number is not necessarily the assembly number. However, the assembly number and parts list number are always the same.

Drawing	Drawing No.
Instrument Schematic	0004-00-0165
Chassis Assembly	0102-00-0836
Chassis Parts List	1101-00-0836
Main Board Schematic	0103-00-2917
Main Board Assembly	1100-00-2917
Main Board Parts List	1100-00-2917

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

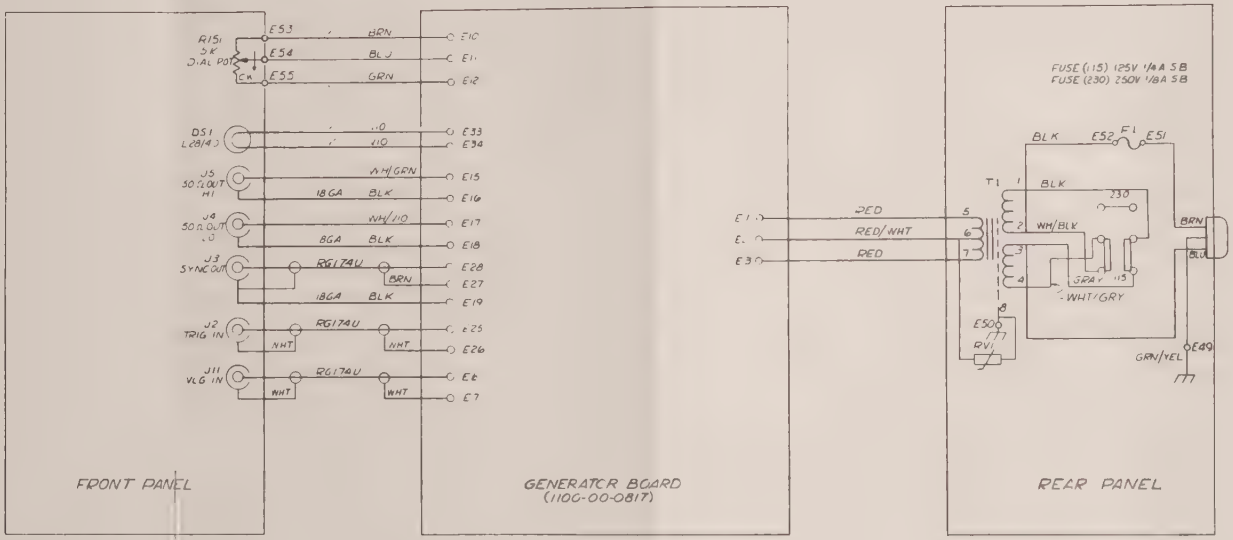

NOTE UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES
MATERIAL
FINISH WAVETEK PROCESS
DRAWN RO EIFER 5-8-80
ENG APPROV 11-8-80
MFG APPROV
TOLERANCES UNLESS OTHERWISE SPECIFIED .XXX .010 ANGLES 1° .XX .030
DO NOT SCALE DWG
SCALE

WAVETEK SAN DIEGO, CALIFORNIA

TITLE: SCHEMATIC, INSTRUMENT

MODEL NO 182A
DWG NO 0004-00-0165
REV
CODE IDENT 23338
SHEET 1 OF 1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

REV	ECN	BY	APP
A	ECN 2402	DC	
B	ECN 2909		
C	ECN 2932		
	3017 (cc)		
	3581 (cc)		
	3779 (cc)		

NO 6x3/8" PANHEAD SCREW(SELF-TAP)(2)

NOTE ORIENTATION OF INSTALLED SWITCH

NO 4-40x3/8" PHILLIPS HEAD SELF-TAP SCREW WITH FLAT WASHER, SPLIT LOCK WASHER, AND SHOULDER WASHER (2 PLCS)

NOTE ROUTING OF WIRES FROM XFORMER TO P.C. BD

PINS BEHIND R151

NO 8-32x1/8" PAN HEAD SCREW (4, BLACK)

(SECURE LAMP IN HOUSING WITH "RTV" NO. 3140 SILICONE)

NO 4-40x3/8" PAN HEAD SCREW WITH FLAT WASHER, SPLIT LOCKWASHER AND NUT (2), AS SHOWN

DETAIL "A"
TRANSFORMER PRIMARY WIRING

WIRE TO BE 24 SLEEVED

WHT/GRY, 22 GA, TO XFMR #1

A, TO XFMR #1

2, A TO XFMR #2

A, TO XFMR #3

HEAT SHRINK SLEEVING (5 PLCS TYP)

(REF) GRN/YEL, FROM XFMR#8 TO E 50

SLEEVING (2 PLCS TYP)

(REF) BLK, FROM XFMR#2 TO E 52

(REF) BLU, FROM XFMR#3 TO PWR CORD

(REF) BRN TO E 51

(REF)

FULLY INSULATE ALL 8 XFORMER TERMINALS (HEAT SHRINK SLEEVING)

(27) INSTALL BETWEEN TERMINALS 6 AND 8

RED (FROM XFMR#7 TO E 3)

WHT/RED (FROM XFMR#6 TO E 2)

RED (FROM XFMR#5 TO E 1)

HEAT SHRINK

E 52

E 50

(TIP 30)

TYP BNC HARDWARE STACK-UP

(REF 5) (12)

NO 4-40x3/8" PAN HEAD SCREW WITH INT TOOTH LOCK WASHER (2 PLCS TYP)

INTERNAL TOOTH LOCKWASHER AND NUT (5)

(REF) RG174/U (3 PLCS (TY-WRAP AS REQ'D) WRAP LEADS AROUND BNC POSTS

* CRITICAL - LEAD LENGTH FROM COAX BREAKOUT TO BNC AND LUG MUST BE KEPT AS SHORT AS POSSIBLE

WIRING LIST

FROM		TO		
		PWR CORD	E 51	BRN/YEL
		PWR CORD	E 52	BLU
		PWR CORD	XFMR #1	
		TRANSFORMER		
		1		BLU
		2		BRN
		3		GRN/YEL
		4		
		5		RED
		6		WHT/RED
		7		RED
		8		BRN/YEL

3. AFTER INSTALLATION OF FRONT AND REAR FEET APPLY (1) DROP OF LOCTITE 414 (OR EQUIV.) TO SCREW THREADS (6). ALLOW 1 HR. MIN TO DRY WITH FEET UP.

2 TWIST GRN, BLU, AND BRN WIRES TOGETHER AS SHOWN BEFORE SOLDERING TO PUT AND P.C. BOARD.

1 NO. 6-32 x 3/8" SOCKET HEAD CAP SCREW WITH SPLIT LOCK WASHER, ITEM NO. 14, AND NO. 6 METAL LOCK NUT (CAD PLATE) 2 PLACES AS SHOWN.

NOTE UNLESS OTHERWISE SPECIFIED

SEE SEPARATE PARTS LIST 1101-00-0836

REV	ECN	BY	APP
H	ECO# 9223		
G	ECO# 9147		
F	ECO# 8324		
D	ECN 3988	OCT 12 88	

REMOVE ALL BURRS | DRAWN: S CHERMACK | DATE: 5-19-86

MATERIAL | FINISH | TOLERANCE OTHERWISE SPECIFIED XXX .010 ANGLES ±1 XX .02

FINISH WAVETEK PROCESS

DO NOT SCALE DWG | SCALE

WAVETEK SAN DIEGO, CALIFORNIA

CHASSIS ASSEMBLY

MODEL NO 1824 | DWG NO 0102-00-0836 | REV H

SIZE B | CAGE NO 23338

0102-00-0836 H

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

REV	ECN	BY	DATE	APP

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO	QTY/PT
NONE	ASSY DRWG, CHASSIS	0102-00-0836	WVTK	0102-00-0836	1
1	DIAL ASSY	WVTK	182A-10	1201-00-1872	1
2	TRANSFORMER	182A-0041	WVTK	1204-00-0041	1
31	PLATE, NAME	180-303	WVTK	1400-00-2180	1
5	INDICATOR, DIAL	180-303	WVTK	1400-00-4970	1
6	COVER, TOP	180-300-1	WVTK	1400-00-3000	1
7	COVER, BOTTOM	180-300-2	WVTK	1400-00-3030	1
29	LABEL, WARNING	801-6940	WVTK	1400-00-6940	1
11	BRACKET, AC SHIELD	182-9473	WVTK	1400-00-9473	1
9	FRONT PANEL	182A-1760	WVTK	1400-01-1760	1
10	REAR PANEL	180-1843	WVTK	1400-01-1843	1
8	LABEL, RATING	182A-4610	WVTK	1400-01-4610	1
12	CONN BNC	HC-7946	KING	2100-01-0002	5
13	SOLDER LUG	1497	SMITH	2100-04-0012	5
14	SOLDER LUG	11W144	ZIER	2100-04-0025	2
15	KNOB, SMALL	0-M-9	ROGAN	2400-01-0010	1
16	KNOB, 1/4IN BUSHING	RB-67-0-M-9	ROGAN	2400-01-0017	1

WAVETEK PARTS LIST | TITLE: CHASSIS&MAIN BD ASSY | ASSEMBLY NO: 1101-00-0836 | REV: J

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO	QTY/PT
DS1	LAMP	L28/40	MURA	2400-02-0017	1
18	FUSE, 1/4A, 250V, S-B	313 250	LITFU	2400-05-0008	1
19	FUSE HOLD	031 1633/031 1666	BCHUR	2400-05-0012	1
20	STANDOFF, MALE/FEMALE .875 H, .250 HEX, 4-40	1447-M02-F03-440	UNICP	2800-02-0027	2
32	BAIL ASSY W/FT	18D-300	WVTK	2800-08-0010	1
33	SPEEDNUT, SELF RETAIN	C7494-632-4	TINN	2800-09-0003	6
NONE	WASHER	B31547F019	MDT	2800-11-0019	2
34	RIVET 1/8X3/16L	1125-0406	AVDEL	2800-12-0011	4
35	RIVET	1121-0609	CHOBT	2800-12-0020	2
36	WASHER, WAVE SPRING	3804-133-1	BEA	2800-28-0021	1
37	WASHER, FLAT, BRASS, .029 ID, .400 OD	5714-62-32	BEBTM	2800-28-0022	1
23	STRAIN RELIEF BUSH	BR66-1	MEYCO	2800-37-0003	1
3	INSULATOR(TO-220)	60-11-8302-1674	CHOMA	3100-00-0010	3
R151	POT, DIAL, 5K+/-5%, PRECISION, LINEAR	ECONOPOT MAIII 78PF-1	MEI	4600-05-0212	1
27	VARISTOR	4899-00-0045	WVTK	4799-00-0048	1

WAVETEK PARTS LIST | TITLE: CHASSIS&MAIN BD ASSY | ASSEMBLY NO: 1101-00-0836 | REV: J

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO	QTY/PT
Z6	TRANS	TIP-30	TI	4902-00-0300	1
Z8	SWITCH ASSY SLIDE	46256-LFE	EMCFT	3105-00-0002	1
Z4	PWR CORD	17534	BELDN	6001-80-0004	1
Z5	VOLTAGE REGULATOR	MC7815	MOT	7000-78-1500	1

WAVETEK PARTS LIST | TITLE: CHASSIS&MAIN BD ASSY | ASSEMBLY NO.: 1101-00-0836 | REV: J

NOTE UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO, CA. 92189
MATERIAL	PROJ ENGR		TITLE: PARTS LIST CHASSIS
	RELEASE APPROV		
FINISH: WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 ANGLES ± 1 XX ± .030		
	DO NOT SCALE DWG		MODEL NO: 182A; DWG NO: 1101-00-0836; REV: J
	SCALE		CODE IDENT: 23338; SHEET 1 OF 1

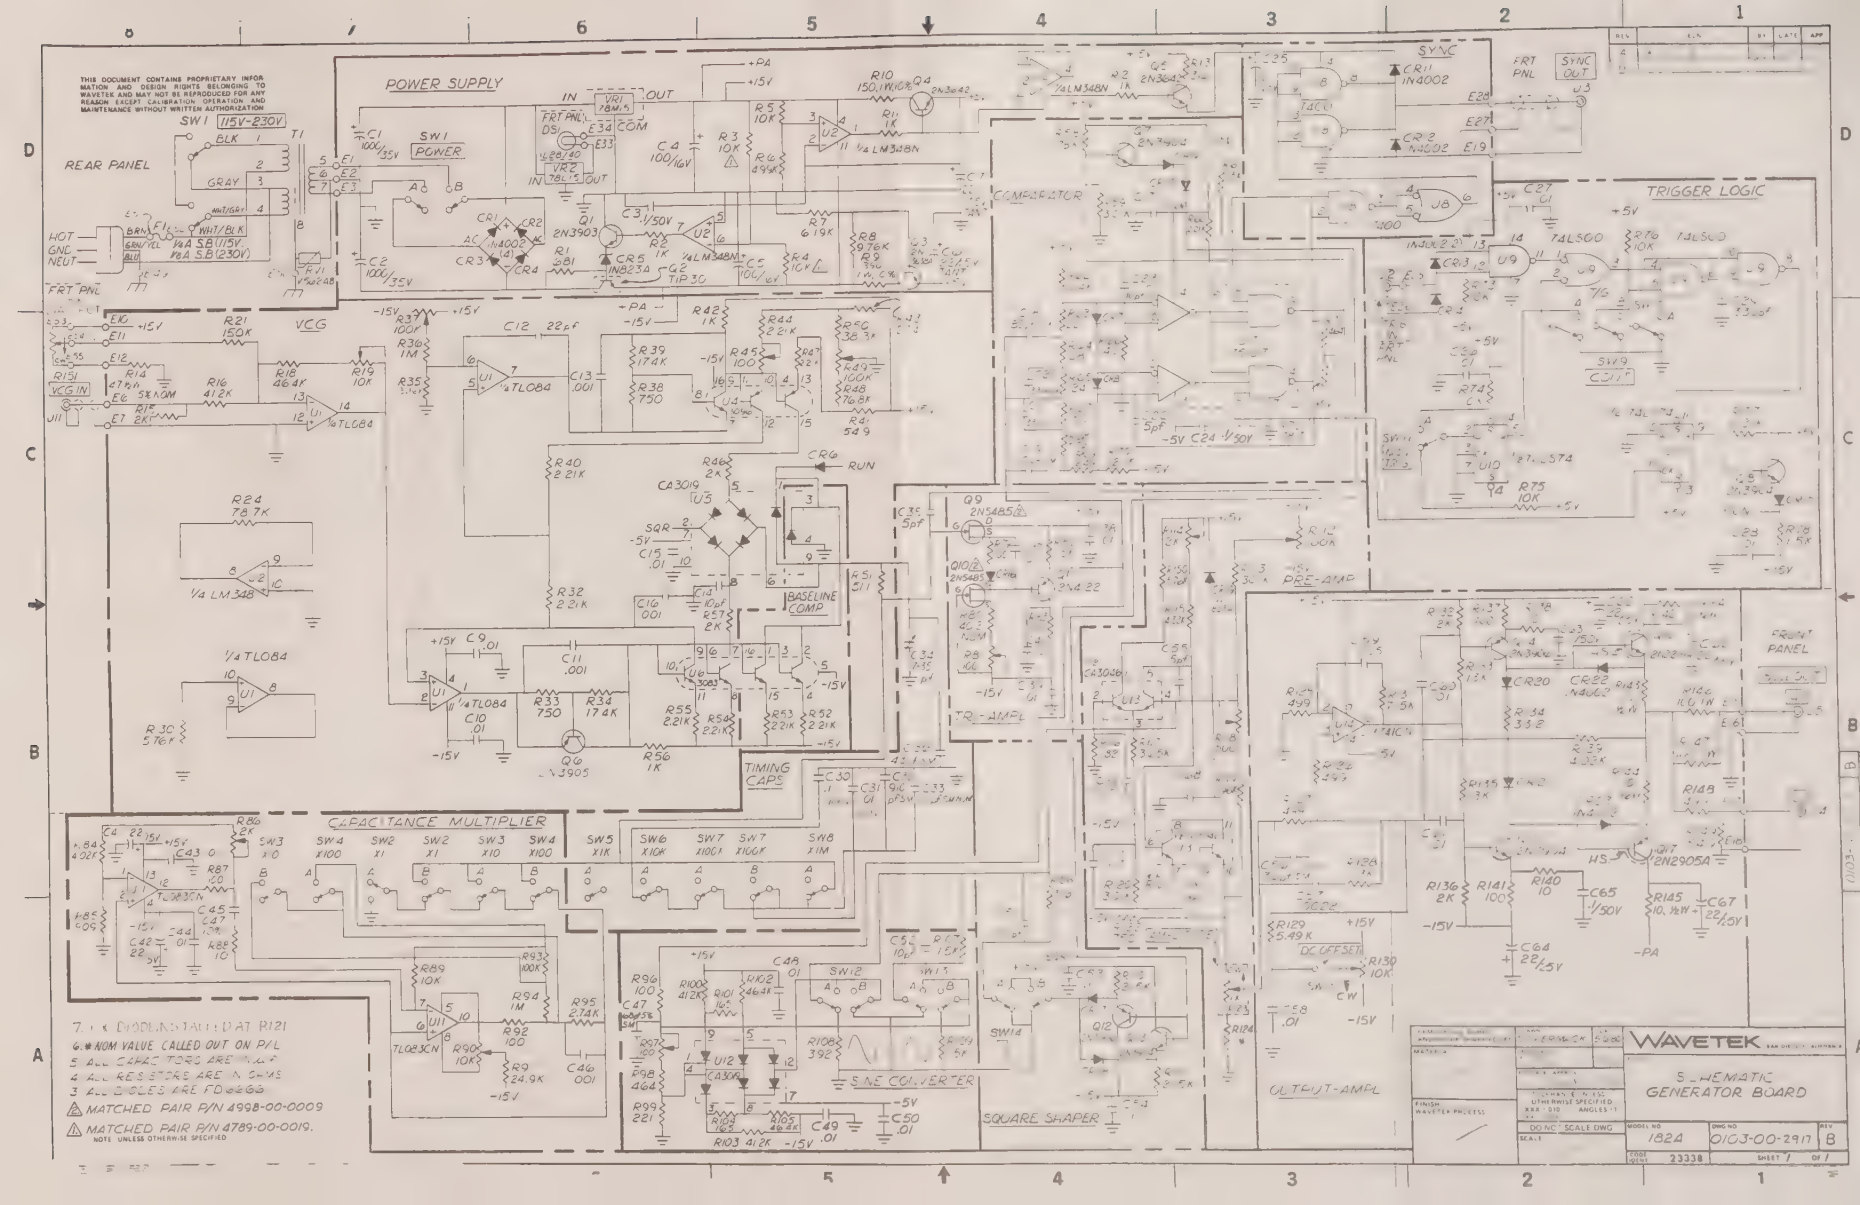
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION OPERATION AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION
POWER SUPPLY
REAR PANEL
SW1 115V-230V
SW1 POWER
FRT PANEL
VCG
COMPARATOR
SYNC
TRIGGER LOGIC
PRE-AMP
TRI-AMP
BASELINE COMP
TIMING CAPS
CAPACITANCE MULTIPLIER
SINE CONVERTER
SQUARE SHAPER
OUTPUT-AMP
DC OFFSET
FRONT PANEL
RUN
WAVETEK
SCHEMATIC GENERATOR BOARD
MODEL NO 1824
DWG NO 0103-00-2911
REV B
SHEET 1 OF 1

THIS DOCUMENT CONTAINS PROPRIETARY INFOR
MATION AND DESIGN RIGHTS BELONGING TO
WAVETEK AND MAY NOT BE REPRODUCED FOR ANY
REASON EXCEPT CALIBRATION OPERATION AND
MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

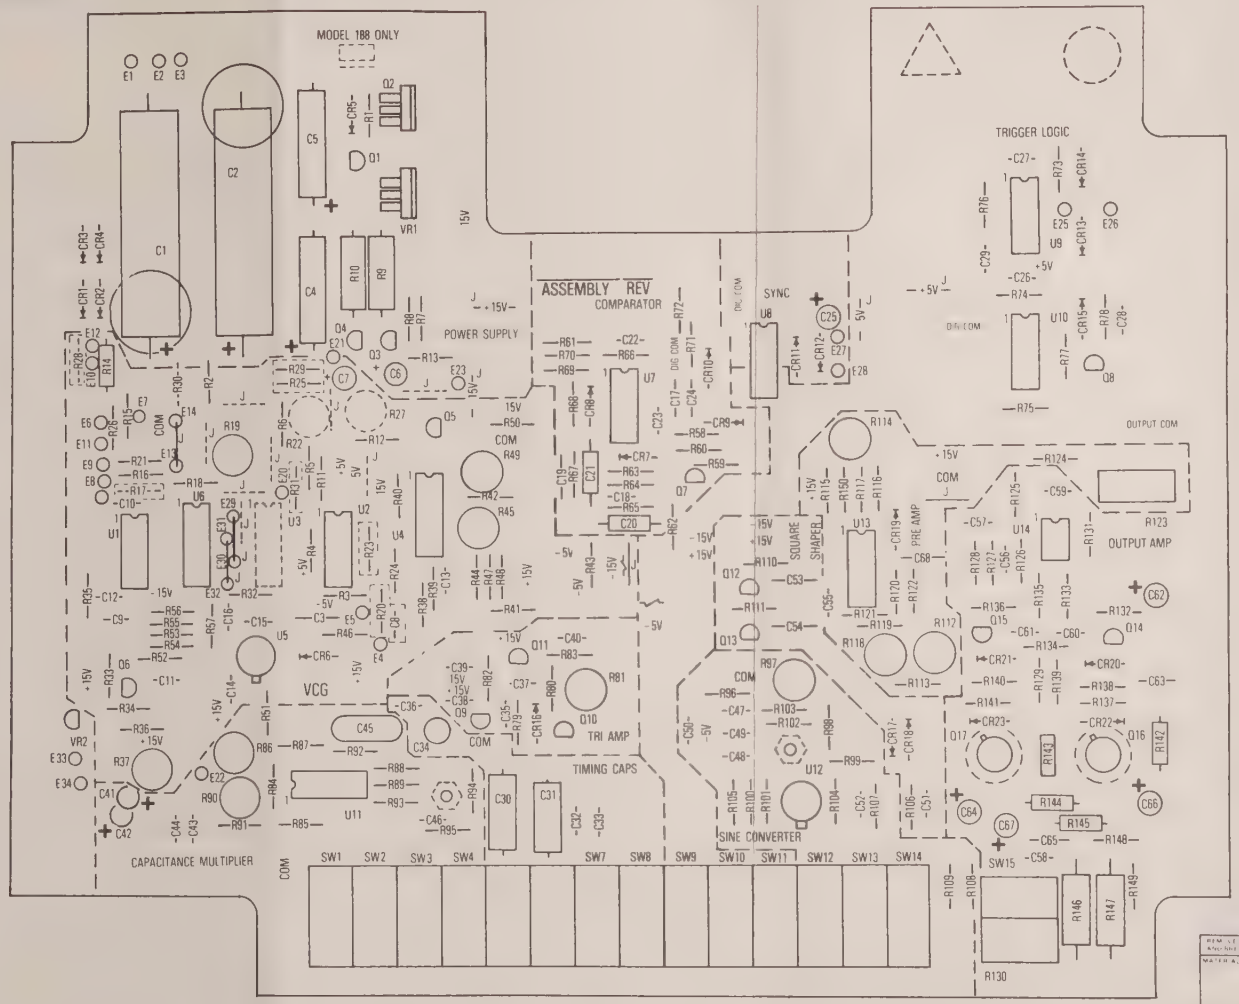

MADE FROM 0100-00-0817-4C

REMOVE ALL BURRS AND SHARP EDGES	DRAWN	DATE	WAVETEK
MATERIAL	APPROVED		GENERATOR BOARD
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX .010 ANGLES 1 .XX .030		
	DO NOT SCALE DWG		MODEL NO. 182A
	SCALE		PART NO. 1100-00-2917 REV
			CODE IDENT 23338 SHEET 1 OF 1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
NONE	ASSY DRAWING			0101-00-2917	1
NONE	SCHEMATIC			0103-00-2917	1
C22 C35 C55	CAP,CER. 5PF.1KV	DD-050	CRL	1500-00-5011	3
C14 C23 C52	CAP,CER.10PF,1KV	DD-100	CRL	1500-01-0011	3
C51	CAP,CER.100PF,1KV	DD-101	CRL	1500-01-0111	1
C11 C13 C16 C46	CAP,CER,.001UF,1KV	DD-102	CRL	1500-01-0211	4
C10 C15 C26 C27 C28 C37 C38 C39 C40 C43 C44 C48 C49 C50 C58 C60 C61 C9	CAP CER MON .01MF 50V, AXIAL	CAC0225U103Z100A	CORNG	1500-01-0310	18
C17 C24 C3 C53 C54 C63 C65 C68	CAP,CER.MON, 1MF,50V. AXIAL	CAC035U104Z050A	CORNG	1500-01-0405	8
C69	CAP,CER,15PF,1KV	DD-150	CRL	1500-01-3011	1
C12	CAP.CER.22PF,1KV	DD-220	CRL	1500-02-2011	1
C57	CAP,CER,.0022,1KV	DD-222SLL	CRL	1500-02-2201	1
C29	CAP,CER.330PF,1KV	DD-331	CRL	1500-03-3111	1
C20 C21	CAP C MON 3300PF 50V	1801X7R030A332J	VRDYN	1500-03-3205	2
C59	CAP,CER. .005MF,50V	CK-502	CRL	1500-05-0210	1
C69	CAP,CER.56PF,1KV	DD-560	CRL	1500-05-6001	1

WAVETEK PARTS LIST | TITLE: ASSY,PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C | PAGE 1

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
1	GENERATOR BD	188-0817	WVTK	1700-00-0817	1
NONE	HEAT SINK	207	WAKE	2800-11-0001	2
NONE	TRANSIPAD	931-218	BIVAR	2800-11-0004	2
R43 R81 R97	POT.TRIM,100	91AR100	BECK	4600-01-0103	3
R19 R90	POT.TRIM,10K	91AR10K	BECK	4600-01-0313	2
R112 R49	POT.TRIM,100K	91AR100K	BECK	4600-01-0402	2
R114 R86	POT.TRIM,2K	91AR2K	BECK	4600-02-0201	2
R118	POT.TRIM,500	91AR500	BECK	4600-05-0104	1
R130	POT,SWITCH,10K	4602-01-0300	WVTK	4602-01-0300	1
R123	POT,CONT,1K FROM 4600-01-0207	4609-71-0201	WVTK	4609-71-0201	1
R37	POT.TOP TRIM.20T.100K	68WR100K	BECK	4609-90-0001	1
R142 R143 R144 R145	RES.C,1/2W,5%,10	RC-1/2-100J	STKPL	4700-25-0100	4
R14	RES.C,1/2W,5%,4.7	RC-1/2-4R7J	STKPL	4700-25-0479	1
R10	RES.C,1W,10%,150	4700-35-1500	WVTK	4700-36-1500	1
R9	RES.C,1W,10%,390	4700-35-3900	WVTK	4700-36-3900	1
R137 R141 R79 R83 R87 R92 R96	RES.MF,1/8W,1%,100	RN55D-1000F	TRW	4701-03-1000	7

WAVETEK PARTS LIST | TITLE: ASSY,PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C | PAGE 3

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
R58	RES.MF,1/8W,1%,1.78K	RN55D-1781F	TRW	4701-03-1781	1
R116	RES.MF,1/8W,1%,182	RN55D-1820F	TRW	4701-03-1820	1
R119	RES.MF,1/8W,1%,1.96K	RN55D-1961F	TRW	4701-03-1961	1
R132 R136 R15 R46 R57	RES.MF,1/8W,1%,2K	RN55D-2001F	TRW	4701-03-2001	5
R110 R111	RES.MF,1/8W,1%,21.5K	RN55D-2152F	TRW	4701-03-2152	2
R63 R99	RES.MF,1/8W,1%,221	RN55D-2210F	TRW	4701-03-2210	2
R32 R40 R44 R47 R52 R53 R54 R55 R60 R77	RES.MF,1/8W,1%,2.21K	RN55D-2211F	TRW	4701-03-2211	10
R69	RES.MF,1/8W,1%,249	RN55D-2490F	TRW	4701-03-2490	1
R91	RES.MF,1/8W,1%,24.9K	RN55D-2492F	TRW	4701-03-2492	1
R93	RES.MF,1/8W,1%,2.74K	RN55D-2741F	TRW	4701-03-2741	1
R43	RES.MF,1/8W,1%,27.4	RN55D-27R4F	TRW	4701-03-2749	1
R120 R39	RES.MF,1/8W,1%,3.01K	RN55D-3011F	TRW	4701-03-3011	2
R113	RES.MF,1/8W,1%,301K	RN55D-3013F	TRW	4701-03-3013	1
R106 R13	RES.MF,1/8W,1%,316	RN55D-3160F	TRW	4701-03-3160	2
R35	RES.MF,1/8W,1%,3.16K	RN55D-3161F	TRW	4701-03-3161	1
R134	RES.MF,1/8W,1%,33.2	RN55D-33R2F	TRW	4701-03-3329	1

WAVETEK PARTS LIST | TITLE: ASSY,PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C | PAGE 5

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
C33T	CAP,MICA,100PF,500V	DM15-101J	ARCO	1500-11-0100	1
C19	CAP,MICA,120PF,500V,RADIAL	DM15-121J	ARCO	1500-11-2100	1
C36 C56T	CAP,MICA,43PF,500V	DM15-430J	ARCO	1500-14-3000	2
C47	CAP,MICA,68PF,500V	DM15-680J	ARCO	1500-16-8000	1
C18	CAP,MICA,82PF,500V	DM15-820J	ARCO	1500-18-2000	1
C32	CAP,MICA,910PF,100V,1%,RADIAL	DM15-911F	ARCO	1500-19-1101	1
C4 C5	CAP,ELECT,100MF,16V	500D107O016DC7	SPRAG	1500-31-0101	2
C1 C2	CAP,ELECT,1000MF,35V	39D10900350L6	SPRAG	1500-31-0212	2
C25 C6 C62 C64 C66 C67 C7	CAP,ELECT,22MF,25V,RADIAL	BRA25V822MC	UNCON	1500-32-2002	7
C31	CAP,POLYC,.01MF,100V,AXIAL	C31B103F	BISHO	1500-41-0304	1
C30	CAP,POLYC,.1MF,100V,AXIAL	PA2B104F	ELCUB	1500-41-0404	1
C45	CAP,MYLAR,.047MF100V	225P47391WD3	SPRAG	1500-44-7314	1
C34	CAP,VAR,7-35PF 250V	78-TRIKO-02 7/35 PF	TRIKO	1500-53-5000	1
C41 C42	CAP, TANT. 22MF, 20V	202A2002226M3	MATSO	1500-72-2621	2

WAVETEK PARTS LIST | TITLE: ASSY,PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C | PAGE 2

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
R11 R12 R2 R42 R56	RES.MF,1/8W,1%,1K	RN55D-1001F	TRW	4701-03-1001	5
R5 R73 R74 R75 R76 R89	RES.MF,1/8W,1%,10K	RN55D-1002F	TRW	4701-03-1002	6
R93	RES.MF,1/8W,1%,100K	RN55D-1003F	TRW	4701-03-1003	1
R36 R94	RES.MF,1/8W,1%,1M	RN55D-1004F	TRW	4701-03-1004	2
R138 R140 R88	RES.MF,1/8W,1%,10	5043ED10R100F	MEPCO	4701-03-1009	3
R70	RES.MF,1/8W,1%,12.1K	RN55D-1212F	TRW	4701-03-1212	1
R65	RES.MF,1/8W,1%,124	RN55D-1240F	TRW	4701-03-1240	1
R62	RES.MF,1/8W,1%,12.4K	RN55D-1242F	TRW	4701-03-1242	1
R128 R133 R135	RES.MF,1/8W,1%,13K	RN55D-1302F	TRW	4701-03-1302	3
R66	RES.MF,1/8W,1%,140	RN55D-1400F	TRW	4701-03-1400	1
R67	RES.MF,1/8W,1%,150	RN55D-1500F	TRW	4701-03-1500	1
R107 R109 R61 R78 R82	RES.MF,1/8W,1%,1.5K	RN55D-1501F	TRW	4701-03-1501	5
R21	RES.MF,1/8W,1%,150K	RN55D-1503F	TRW	4701-03-1503	1
R124T	RES.MF,1/8W,1%,15	RN55D-15R0F	TRW	4701-03-1509	1
R101 R104	RES.MF,1/8W,1%,163	RN55D-1630F	TRW	4701-03-1630	2
R34 R39	RES.MF,1/8W,1%,17.4K	RN55D-1742F	TRW	4701-03-1742	2

WAVETEK PARTS LIST | TITLE: ASSY,PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C | PAGE 4

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
R117	RES.MF,1/8W,1%,3.65K	RN55D-3651F	TRW	4701-03-3651	1
R90	RES.MF,1/8W,1%,38.3K	RN55D-3832F	TRW	4701-03-3832	1
R108	RES.MF,1/8W,1%,392	RN55D-3920F	TRW	4701-03-3920	1
R139 R84	RES.MF,1/8W,1%,4.02K	RN55D-4021F	TRW	4701-03-4021	2
R80	RES.MF,1/8W,1%,40.2	RN55D-40R2F	TRW	4701-03-4029	1
R100 R103 R16	RES.MF,1/8W,1%,41.2K	RN55D-4122F	TRW	4701-03-4122	3
R115	RES.MF,1/8W,1%,4.32K	RN55D-4321F	TRW	4701-03-4321	1
R71 R98	RES.MF,1/8W,1%,464	RN55D-4640F	TRW	4701-03-4640	2
R102 R105 R18	RES.MF,1/8W,1%,46.4K	RN55D-4642F	TRW	4701-03-4642	3
R125 R126 R127 R148	RES.MF,1/8,1%,499	RN55D-4990F	TRW	4701-03-4990	4
R6	RES.MF,1/8W,1%,4.99K	RN55D-4991F	TRW	4701-03-4991	1
R51	RES.MF,1/8W,1%,51.1	RN55D-51R1F	TRW	4701-03-5119	1
R129	RES.MF,1/8W,1%,5.49K	RN55D-5491F	MEPCO	4701-03-5491	1
R149 R41	RES.MF,1/8W,1%,54.9	RN55D-54R9F	TRW	4701-03-5499	2
R68	RES.MF,1/8W,1%,576	RN55D-5760F	TRW	4701-03-5760	1
R130 R30	RES.MF,1/8W,1%,5.76K	RN55D-5761F	TRW	4701-03-5761	2
R7	RES.MF,1/8W,1%,6.19K	RN55D-6191F	TRW	4701-03-6191	1

WAVETEK PARTS LIST | TITLE: ASSY,PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C | PAGE 6

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	PROJ ENGR		TITLE: PARTS LIST GENERATOR BOARD
	RELEASE APPROV		
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 ANGLES ± 1° XX ± .030		
	DO NOT SCALE DWG		MODEL NO. 182A / DWG NO. 1100-00-2917 / REV. C
	SCALE		CODE IDENT 23338 / SHEET 1 OF 2

BISHOP GRAPHICS/ACCUPRESS RECORD NO. A-3384

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
R1 R64	RES. MF, 1/8W, 1%, 681	RN55D-6810F	TRW	4701-03-6810	2
R131	RES. MF, 1/8W, 1%, 7.15K	RN55D-7151F	TRW	4701-03-7151	1
R122 R33 R38	RES. MF, 1/8W, 1%, 750	RN55D-7500F	TRW	4701-03-7500	3
R48	RES. MF, 1/8W, 1%, 76.8K	RN55D-7682F	TRW	4701-03-7682	1
R24	RES. MF, 1/8W, 1%, 78.7K	RN55D-7872F	TRW	4701-03-7872	1
R72	RES. MF, 1/8W, 1%, 78.7	RN55D-78R7F	TRW	4701-03-7879	1
R85	RES. MF, 1/8W, 1%, 909	RN55D-9090F	TRW	4701-03-9090	1
R8	RES. MF, 1/8W, 1%, 9.76K	RN55D-9761F	TRW	4701-03-9761	1
R146 R147	RES. MF, 1W, 1%, 100	RN70D-1000F	TRW	4701-33-1000	2
R3 R4	RES. SET, 2-10K, 1/8W QTY 2: 4701-03-1002	142-501-64A	WVTK	4789-00-0019	1
3	RES. 0 OHM JUMPER	JP02T6BG	ROHM	4799-00-0087	9
R121	DIODE, ZENER, 3.3V, 5% TOL, 500MW, G/B, IN746A	1N746A	FAIR	4801-01-0746	1
CR19 CR5	DIODE, ZENER, 6.2V, IN823	1N823A	MOT	4801-01-0823	2
CR1 CR11 CR12 CR13 CR14 CR21 CR22 CR23 CR3 CR4	DIODE, 1N4002 GEN PURPOSE RECT. 100V, 1A	1N4002	FAIR	4801-02-0001	10

WAVETEK PARTS LIST | TITLE: ASSY, PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	QTY 2: 4901-05-4830				
2	SWITCH ASSY PB	5103-00-0026	WVTK	5103-00-0026	1
U11	OP AMP, DUAL JFET INPUT	TL083CN	TI	7000-00-8300	1
U1	OP AMP, QUAD BIMOS MOS/FET INPUT	TL084CN	TI	7000-00-8400	1
U2	OP AMP, QUAD MC1741 DIFFERENTIAL INPUT	LM348N	NSC	7000-03-4800	1
U14	OP AMP, INTERNALLY COMP, HIGH PERFORMANCE	LM741CN	NSC	7000-07-4100	1
U12 U5	DIODE, ULTRA FAST, LOW CAPACITANCE	CA-3019	RCA	7000-30-1900	2
U13	TRANS ARRAY, GENERAL PURPOSE NPN	CA-3046	RCA	7000-30-4600	1
U6	TRANS ARRAY, GENERAL PURPOSE, NPN	CA3083	FAIR	7000-30-8300	1
U4	TRANS ARRAY, NPN/PNP	CA-3096AE	RCA	7000-30-9600	1
VR2	VOLT REGULATOR, POSITIVE	78L15	TI	7000-78-1501	1
U7	RECEIVER, DUAL LINE	SN75107AN	TI	7007-51-0700	1

WAVETEK PARTS LIST | TITLE: ASSY, PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
CR10 CR13 CR16 CR17 CR18 CR20 CR21 CR6 CR7 CR8 CR9	DIODE 1N4148 COMPUTER, G/P, 75V, 200MA, SWITCHING	1N4148	FAIR	4807-02-6666	11
Q16	TRANS 2N2219A NPN GENERAL PURPOSE TO-5	2N2219A	NSC	4901-02-2191	1
Q17	TRANS 2N2905A PNP GENERAL PURPOSE TO-5	2N2905A	NSC	4901-02-9051	1
Q3	TRANS, GENERAL PURPOSE, PNP, TO-92	2N3638A	CARTR	4901-03-6381	1
Q4 Q5	TRANS, GENERAL PURPOSE, NPN, TO-92	2N3642	FAIR	4901-03-6420	2
Q1	TRANS, GENERAL PURPOSE, NPN, TO-92	2N2903	NSC	4901-03-9030	1
Q13 Q15 Q7 Q8	TRANS 2N2904 NPN GENERAL PURPOSE TO-92	2N2904	FAIR	4901-03-9040	4
Q6	TRANS, GENERAL PURPOSE, PNP, TO-92	2N2905	ITT	4901-03-9050	1
Q12 Q14	TRANS 2N2906 PNP GENERAL PURPOSE TO-92	2N2906	FAIR	4901-03-9060	2
Q11	TRANS, GENERAL PURPOSE, PNP, TO-92	2N4122	NSC	4901-04-1220	1
Q10 Q9	TRANS, M/PR, 2N5465	142-501-53	WVTK	4998-00-0009	1

WAVETEK PARTS LIST | TITLE: ASSY, PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
U8	GATE, NAND, QUAD 2-INPUT	7400	TI	8000-74-0000	1
U9	GATE, NAND, QUAD 2-INP, TTL	SN74LS00N	TI	8000-74-0010	1
U10	FLIP-FLOP DUAL, D-POS EDGE TRIG, TTL	74LS74	TI	8000-74-7410	1

WAVETEK PARTS LIST | TITLE: ASSY, PCA GENERATOR BD 182A-2917 | ASSEMBLY NO. 1100-00-2917 | REV C

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	PROJ ENGR		TITLE: PARTS LIST GENERATOR BOARD
FINISH: WAVETEK PROCESS	RELEASE APPROV		
	TOLERANCE UNLESS OTHERWISE SPECIFIED: XXX ±.010 ANGLES ±1, XX ±.030		
	DO NOT SCALE DWG		
	SCALE		MODEL NO. 182A; DWG NO. 1100-00-2917; REV C; CODE IDENT 23338; SHEET 2 OF 2

BISHOP GRAPHICS/ACCUPRESS RECORDER NO. 6.5964